



(Figure similar)

Figure	Inputs analog	Outputs analog	Input voltage (sensor supply) ⁽¹⁾	Output voltage (actuator supply) ⁽²⁾	ASi address ⁽³⁾	Art. no.
	2 x 4 ... 20 mA / 0 ... 10 V	—	selectable, from ASi or AUX, default ASi	—	1 AB address	BWU1897
	2 x 4 ... 20 mA / 0 ... 10 V	—	selectable, from ASi or AUX, default ASi	—	1 single address	BWU1345
	—	2 x 0 ... 20 mA / 0 ... 10 V	—	selectable, from ASi or AUX, default ASi	1 single address	BWU1412
	—	2 x 0 ... 20 mA / 0 ... 10 V	—	selectable, from ASi or AUX, default AUX	1 single address	BWU1727
	—	2 x -10 V ... +10 V	—	out of AUX	1 single address	BWU2224
	4 x 4 ... 20 mA	—	from ASi or AUX, auto switching	—	1 single address	BWU1364
	4 x 0 ... 10 V	—	from ASi or AUX, auto switching	—	1 single address	BWU1365
	4 x Pt100	—	out of ASi	—	1 single address	BWU1368
	4 x thermocouple type J	—	out of ASi	—	1 single address	BWU1933
	4 x thermocouple type K	—	out of ASi	—	1 single address	BWU2243
	—	4 x 0 ... 20 mA	—	from ASi or AUX, auto switching	1 single address	BWU1366
	—	4 x 0 ... 10 V	—	from ASi or AUX, auto switching	1 single address	BWU1367

- (1) **Input voltage (sensor supply):** inputs are supplied by ASi or by AUX (auxiliary 24 V power). If supplied by ASi, inputs shall not be connected to earth or to external potential.
- (2) **Output voltage (actuator supply):** outputs are supplied by ASi or by AUX (auxiliary 24 V power). If supplied by ASi, outputs shall not be connected to earth or to external potential
- (3) **ASi address:** 1 AB address (max. 62 AB addresses/ASi network), 2 AB addresses (max. 31 modules with 2 AB addresses), Single addresses (max. 31 Single addresses/ASi network), mixed use allowed.
For modules with two ASi nodes the second ASi node is turned off as long as the first ASi node is addressed to address "0".
Upon request, ASi nodes are available with specific ASi address profiles.

Article No.	BWU1897	BWU1345	BWU1364	BWU1365	BWU1368	BWU1933	BWU2243
General Data							
Device type	Input						
Connection							
ASi/AUX connection	Push-in terminals						
Periphery connection	Push-in terminals						
ASi							
Profile	S-7.A.9	S-7.3					
Address	1 AB address	1 single address					
Required Master profile	≥M4	≥M3					
Since ASi specification	3.0	2.1					
Operating voltage	30 V (18 ...31,6 V)	30 V (19 ...31,6 V)	30 V (24 ...31,6 V)	30 V (18 ...31,6 V)			
Max. current consumption	< 80 mA					< 100 mA	
AUX							
Voltage	24 V (18 ... 30 V)				–		
Max. current consumption	500 mA				–		
Input							
Number	2 (4 ... 20 mA/ 0 ... 10 V)	4 (4 ... 20 mA)	4 (0 ... 10 V)	4 (Pt100)	4 (thermo- couple type J)	4 (thermo- couple type K)	
Resolution	14 Bit (1 µA / 1mV)	16 Bit (1 µA / 1 mV)	16 Bit (1 µA)	16 Bit (1 mV)	16 Bit (0,1 °C)	16 Bit (0,1 °C)	
Range of value	4000 ... 20000 dec. / 0 ... 10000 dec.		4000 ... 20000 dec.	0 ... 10000 dec.	-200 °C ... +850 °C	-200 °C ... +760 °C	
Internal resistance	50 Ω / 100 kΩ				–	1 MΩ	
Max. input voltage	25 V				–		
Max. input current	40 mA				–		
Power supply	out of ASi or out of AUX				out of ASi		
Power supply of attached sensors	500 mA out of AUX 50 mA out of ASi				50 mA		
Output							
Resolution	–						
Range of value	–						
Resistance of the actuators	–						
Max. output current	–						
Power supply	–						
Power supply of attached actuators	–						
Environment							
Applied standards	EN 61000-6-2 EN 61000-6-4 EN 60529						
It can be used with a switched AUX cable, which is passively safe up to SIL3/PLe	no ⁽¹⁾				yes ⁽²⁾		
Operating altitude	max. 2000 m						
Operating temperature	0 °C ... +70 °C						
Storage temperature	-25 °C ... +85 °C						
Housing	plastic, for DIN rail mounting						
Pollution degree	2						
Protection category	IP20						
Voltage of insulation	≥ 500 V						
Weight	120 g		145 g				
Dimension (W / H / D in mm)	22,5 / 99 / 92		25 / 105 / 114				

- (1) The module is not suitable for use in paths with a passively safe-switched AUX cable, since an exclusion of errors cannot be assumed for the connection of the two ASi and AUX potentials.
If the module is supplied from an unswitched AUX cable, this has no influence on the safety consideration for the paths with passively safe-switched AUX cable. In an ASi circuit, paths supplied from a passively safe-switched AUX cable and paths supplied from unswitched AUX potential can be used together.
- (2) The module is suitable for use in passively safe paths as it has no connection to an AUX potential.

Article No.	BWU1366	BWU1367	BWU1412	BWU1727	BWU2224
General Data					
Device type	output				
Connection					
ASi/AUX connection	Push-in terminals				
Periphery connection	Push-in terminals				
ASi					
Profile	S-7.3				S-7.3.5
Address	1 single address				
Required Master profile	≥ M3				
Since ASi specification	2.1				
Operating voltage	30 V (24 ... 31,6 V)	30 V (18 ... 31,6 V)			
Max. current consumption	<80 mA				<100 mA
AUX					
Voltage	24 V (18 ... 30 V)				
Max. current consumption	500 mA				
Input					
Resolution	–				
Range of value	–				
Internal resistance	–				
Max. input voltage	–				
Max. input current	–				
Power supply	–				
Power supply of attached sensors	–				
Output					
Number	4 (0 ... 20 mA)	4 (0 ... 10 V)	2 (0 ... 20 mA/0 ... 10 V)		2 (-10 V ... +10 V)
Resolution	16 Bit (1 µA)	16 Bit (1 mV)	16 Bit (1 µA / 1 mV)		16 Bit
Range of value	0 ... 20000 dec.	0 ... 10000 dec.	0 ... 20000 dec. / 0 ... 10000 dec.		-10000 ... +10000 dec.
Resistance of the actuators	–		max. 600 Ω/ min. 3,3 kΩ		≥1 kΩ
Max. output current	–				10 mA
Power supply	out of ASi or out of AUX				out of AUX
Power supply of attached actuators	500 mA out of AUX 50 mA out of ASi				500 mA

Article No.	BWU1366	BWU1367	BWU1412	BWU1727	BWU2224
Environment					
Applied standards	EN 61000-6-2 EN 61000-6-4 EN 60529				
It can be used with a switched AUX cable, which is passively safe up to SIL3/PLe	no ⁽¹⁾				
Operating altitude	max. 2000 m				
Operating temperature	0 °C ... +70 °C				0 °C ... +60 °C
Storage temperature	-25 °C ... +85 °C				
Housing	plastic, for DIN rail mounting				
Pollution degree	2				
Protection category	IP20				
Voltage of insulation	≥ 500 V				
Weight	145 g		120 g		
Dimension (W / H / D in mm)	22,5 / 105 / 114		22,5 / 99 / 92		

- ⁽¹⁾ The module is not suitable for use in paths with a passively safe-switched AUX cable, since an exclusion of errors cannot be assumed for the connection of the two ASi and AUX potentials.
If the module is supplied from an unswitched AUX cable, this has no influence on the safety consideration for the paths with passively safe-switched AUX cable. In an ASi circuit, paths supplied from a passively safe-switched AUX cable and paths supplied from unswitched AUX potential can be used together.

Wiring rules

	Push-in terminals, 2 / 3 / 4 poles (pitch 5 mm)
General	
Nominal cross section	2.5 mm ²
Conductor cross section	
Conductor cross section solid	0.2 ... 2.5 mm ²
Conductor cross section flexible	0.2 ... 2.5 mm ²
Conductor cross section flexible, with ferrule	without plastic sleeve: 0.25 ... 2.5 mm ²
	with plastic sleeve: 0.25 ... 2.5 mm ²
2 conductors with same cross section, stranded, with TWIN ferrules	without plastic sleeve: 0.5 ... 1.5 mm ²
AWG	24 ... 14
Stripped insulation length	10 mm

Programming

Bit	Bit setting			
	input			
Bit	P3	P2	P1	P0
BWU1345	0: both channels in current mode and without broken wire recognition 1: normal operation	1: peripheral fault is indicated 0: peripheral fault is not indicated	0: channel 2 is not projected 1: channel 2 is projected	0: 60 H filter in A/D converter active 1: 50 H filter in A/D converter active
BWU1364 / BWU1365	0: peripheral fault is not indicated 1: peripheral fault is indicated	Analog module is switched on/off (bit combination P1 and P2)		
BWU1368	0: 4 wire-mode 1: 2 wire-mode	A peripheral fault can be released through channel X (bit combination P1 and P2)		
BWU1897	—	1: peripheral fault is indicated 0: peripheral fault is not indicated	0: both channels in current mode and without broken wire recognition 1: normal operation	
BWU1933 / BWU2243	0: external cold-junction compensation 1: internal cold-junction compensation	Analog module is switched on/off (bit combination P1 and P2)	A peripheral fault can be released through channel X (bit combination P1 and P2)	

Combination of input bits P1 and P2

BWU1364, BWU1365, BWU1368						, BWU1933, BWU2243					
Channel c.X is						Peripheral fault can be released through channel					
P1	P2	c.1	c.2	c.3	c.4	P1	P2	1	2	3	4
0	0	on	off	off	off	0	0	yes	no	no	no
0	1	on	on	off	off	1	0	yes	yes	no	no
1	0	on	on	on	off	0	1	yes	yes	yes	no
1	1	on	on	on	on	1	1	yes	yes	yes	yes

Bit	Bit setting			
	output			
	P3	P2	P1	P0
BWU1366 / BWU1367	–	0: peripheral fault is not indicated 1: peripheral fault is indicated	–	0: profile is not monitored 1: profile is monitored:
BWU1412 / BWU1727	0: channel 2 is in mode voltage module 1: channel 2 is in mode current module		0: channel 1 is in mode voltage module 1: channel 1 is in mode current module	0: mode of channel 1 and 2 (bit combination P1 and P3) 1: automatic mode recognition
BWU2224	–		–	


Programming notes

Article no.	ID Code	ID1 Code	ID2 Code	IO Code
BWU1345	3 _{hex}	ID1 = F (default)	D _{hex}	7 _{hex}
BWU1364, BWU1365, BWU1368, BWU1933, BWU2243	3 _{hex}	ID1 = F (default)	E _{hex}	7 _{hex}
BWU1366, BWU1367	3 _{hex}	ID1 = F (default)	6 _{hex}	7 _{hex}
BWU1412, BWU1727	3 _{hex}	ID1 = F (default)	5 _{hex}	7 _{hex}
BWU1897 ⁽¹⁾	A _{hex}	Code-Definition		9 _{hex} 7 _{hex}
		ID1	14 bit 12 Bit	
		channel 1	0; 2; 3 1	
		channel 1 and 2	4; 5; 7 (default) 6	
BWU2224	3 _{hex}	F _{hex} (default)	5 _{hex}	7 _{hex}

(1) BWU1897 can transfer either 12 or 14 bit-values. Via ID1 the data capacity and the channel number can be defined.

UL-specifications (UL508) BWU1345, BWU1364, BWU1365, BWU1366, BWU1367, BWU1368, BWU1412, BWU172,7 BWU1933, BWU1897, BWU2243	
External protection	An isolated source with a secondary open circuit voltage of $\leq 30 V_{DC}$ with a 3 A maximum over current protection. Over current protection is not required when a Class 2 source is employed.
In general	UL mark does not provide UL certification for any functional safety rating or aspects of the above devices.

Connections BWU1345, BWU1897

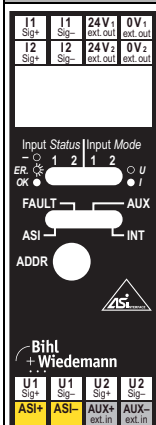

LEDs BWU1345, BWU1897


ASI (green)	ASi voltage
FAULT (red)	ASi communication error, peripheral fault
AUX (green)	Voltage supply 24 V for the analog part
INT (green)	Voltage supply for the analog part out of ASi
Input Status 1 (green)	State of channel 1
Input Status 2 (green)	State of channel 2
Input Status 1 (green)	On: current measurement; off: voltage measurement
Input Status 2 (green)	On: current measurement; off: voltage measurement

Current or voltage modules can be attached over different terminals. The current supply of the sensors can take place depending upon position of a slide switch from ASi or from external voltage (after PELV). With the help of a 2. slide switch the 2. channel in favor of faster data communication can be switched off. The position of the slide switches is indicated over LEDs.

Supplying external loads:

- by supply out of ASi: 50 mA max.
- y external supply: 500 mA max. (750 mA fuse)


Connections BWU1364, BWU1365

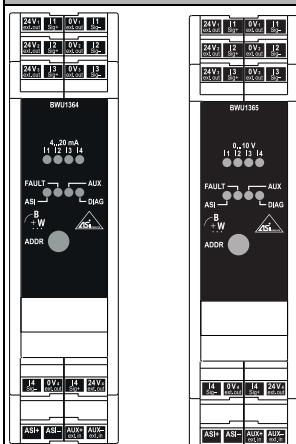

LEDs BWU1364, BWU1365

ASI (green)	ASi voltage
FAULT (red)	ASi communication error, peripheral fault
AUX (green)	Voltage supply 24 V for the analog part
DIAG (green)	Diagnosis
I1 ... I4 (yellow)	State of channel I1, I2, I3, I4

The current supply of the sensors can be made out of ASi or an external voltage supply (according to PELV). The current supply switches automatically to the supply out of external voltage supply, as soon as an external voltage is connected. The analog sensors and ASi are galvanically separated.

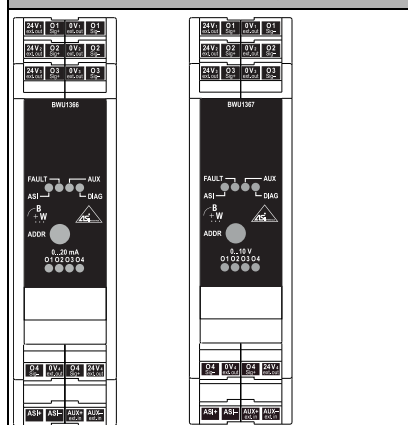
Connections BWU1366, BWU1367

LEDs BWU1366, BWU1367

ASI (green)	ASi voltage
FAULT (red)	ASi communication error, peripheral fault
AUX (green)	Voltage supply 24 V for the analog part
DIAG (green)	Diagnosis
O1 ... O4 (yellow)	State of channel O1, O2, O3, O4

The current supply of the actuators can be made out of ASI or an external voltage supply (according to PELV). The current supply switches automatically to the supply out of external voltage supply, as soon as an external voltage is connected. The actuators and ASI are galvanically separated.


Connections BWU1368

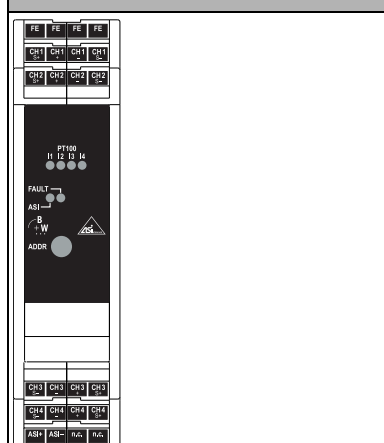

LEDs BWU1368

ASi (green)	ASi voltage
FAULT (red)	ASi communication error, peripheral fault
I1 ... I4 (yellow)	State of channel I1, I2, I3, I4

The measuring sensors and ASi are galvanically separated.

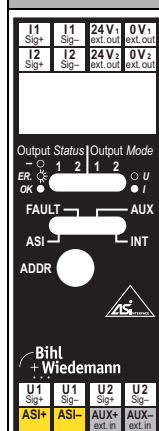
Connections BWU1412, BWU1727

LEDS BWU1412, BWU1727

ASI (green)	ASi voltage
FAULT (red)	ASi communication error, peripheral fault
AUX (green)	Voltage supply 24 V for the analog part
INT (green)	Voltage supply for the analog part out of ASi
Output Status 1 (green)	State of channel 1
Output Status 2 (green)	State of channel 2
Output Status 1 (green)	Channel 1: on: current measurement; off: voltage measurement
Output Status 2 (green)	Channel 2: on: current measurement; off: voltage measurement


Current or voltage modules can be attached over different terminals. The current supply of the actuators can take place depending upon position of a slide switch from ASI or from external voltage (after PELV). The position of the slide switch is indicated over LEDs. BWU1897: With the help of a 2. slide switch the 2. channel in favor of faster data communication can be switched off.

Connections BWU1933, BWU2243

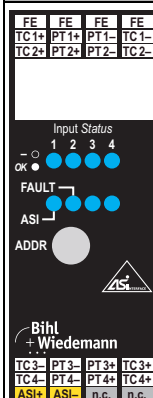

Terminal connections BWU1933, BWU2243

FE	Functional earth
TCx±	Thermo element +/– (inputs 1 - 4)
PTx±	PT100 +/– (External cold junction compensation)
ASi±	ASiinterface +/–
n.c.	Not connected



The inputs ch. 2, ch. 3 and ch 4 are connected with a bridge and a resistor (in default state) to become a valid input value and to avoid peripheral faults.

This can also be obtained by setting the parameter P1 and P2.

The temperature is measured using cold junction temperature compensation. The analog sensors are galvanical separated to ASi. For internal compensation the peripheral fault can be caused by a broken wire of the thermocouple. For the external compensation (Pt100 in connectors 2 and 3) the peripheral fault can also be caused by a broken wire or a short circuit of the Pt100 element. A short circuit of the TC cannot be recognized as an error.


Note:

Precise cold junction compensation requires vertical mounting and natural air circulation. A clearance of at least 5 cm each side is required!

LEDs BWU1933, BWU2243

ASI (green)	ASi voltage
FAULT (red)	ASi communication error, peripheral fault
Input Status (yellow)	State of channel I1, I2, I3, I4

Connections BWU2224

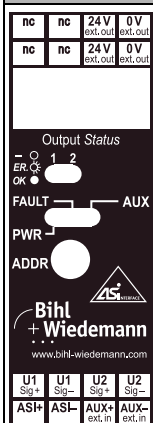

LEDs BWU2224

ASI (green)	ASi voltage
FAULT (red)	On: ASi communication error; flashing: peripheral fault
AUX (green)	Voltage supply 24 V for the analog part
Output Status 1 (yellow)	State of channel 1
Output Status 2 (yellow)	State of channel 2

U1 Sig- and U2 Sig- connected.

The outputs are short circuit. The output channels have a common reference potential. The actuators are controlled from separate 24 V and they are galvanically isolated from ASI and AUX.



Note

To achieve passive safety, the device must be installed in a switching cabinet with protection class IP54.

Accessories:

- ASi-5/ASi-3 Address Programming Device (art. no. BW4925)